


THE WOOD STAIN




HOW TO APPLY

- USE** For use on new or refinished wood interior floors, cabinetry, millwork, furniture, walls, ceilings, trim, siding, countertops, etc.
- PROJECT PREP** Paint should be applied to a clean dry surface, free of dust, grime, wax, debris, or other contaminants. Previous finishes should be stripped or sanded off. Sand with 220 grit sandpaper and remove dust with a damp cloth.
- PRODUCT PREPARATION** Open can and stir well, stir the stain thoroughly to mix any pigments that may have settled at the bottom. Do not thin or shake.
- TEST SWATCH** Apply the stain to a small, inconspicuous area of the wood to test the color. This will give you an idea of the final appearance.
- COVERAGE** 1 quart treats up to 200 sq. ft. Actual coverage varies based on application and surface type.
- APPLICATION** Using a brush, rag, or foam applicator, apply a thin, even coat of stain in the direction of the wood grain using a natural bristle brush. Keep a wet edge as you work. Stirring occasionally during use. For best results, use when temperature is between 55–90°F (19–32°C) and relative humidity is below 85%. Do not work out of the can.**RECOAT** For superior protection, apply up to three coats of varnish, especially in high traffic or water-exposed areas. Apply 2nd coat within 4 hours of applying 1st coat or wait 48 hours.
- WIPE OFF EXCESS** Wait 5–10 minutes, then wipe excess away in the direction of the wood grain. For lighter colors, apply and wipe off excess immediately. The



THE WOOD STAIN

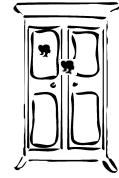

- ADDITIONAL COATS** Re-coat as needed for desired color, following the same instructions. Allow 2 hours for project re-coat time.
- DRY TIME** Dry to touch in just 2 hours. Allow longer dry times for darker colors, cooler climates, damp/humid climates and soft woods.
- PROTECTION** Once the desired color is achieved and the stain is dry, apply a clear finish to protect the wood and lock in the color. Protect wood and color with **The Varnish** or **The Polyurethane topcoat**. Wait a minimum of two hours and apply a topcoat per the directions on the can.
- CURE TIME** After the final coat or sealant is applied, allow to cure for 24 hours before light use. Full cure time for heavy use on all coatings products is 30 days.
- CLEAN UP** Mineral spirit clean-up for oil-based wood stain. Close lid securely between uses.
- PRODUCT STORAGE** Store product in a cool, dry place, 55-90 degrees F.

